



Active Thermal Management

Cool answers to hot problems....

Instructions for installation of the Cool-base™

The Cool-base is designed to be placed beneath a satellite receiver, receiver/PVR combination, or lightweight amplifier or receiver (or any other heat-producing device; we shall use the term "receiver" for simplicity) which has ventilation openings on the bottom surface. Its fans, while quiet, are powerful enough to force a gentle stream of air up through the receiver and out the top or side openings, providing a substantial cooling effect.

It is necessary to place foam air dams on either the top side of the Cool-base or the underside of the receiver to force the air stream to go into the receiver and not simply flow out through the space between the receiver and the Cool-base; a length of adhesive-backed foam weatherstripping is supplied with each Cool-base. When installed, the foam should not allow air to escape under the receiver, and a gentle flow of air should be felt at the receiver's top and/or side ventilation openings.

Connect the Cool-base's power supply to a power outlet; while a thermal switch is available as an option, and the power supply can be plugged into a switched outlet, it may be desirable to run the Cool-base at all times, as many devices have heat-producing circuitry which is on at all times.

Please note: The Cool-base is a more specialized product than many other Active Thermal Management products; it is possible that it is not suitable for use with your equipment, due to any one of a number of factors. The bottom openings may be too close to the sides, or too small, etc. If this is the case, contact us immediately to arrange for return of the Cool-base and exchange for a cooling device more suitable for your equipment. Please do this within 14 days of receipt of your order.

(Over for additional information)

WARRANTY

Active Thermal Management (“ATM”) warrants its products against defects in materials and workmanship for a period of one year from date of purchase. We will repair or replace, at our option, any ATM product which has a defect in materials or workmanship. The product must be properly packaged and returned prepaid with an ATM return authorization number clearly written on the outside of the shipping carton and with a copy of the bill of sale or ATM invoice to verify the original purchase date.

Our warranty does NOT apply to:

- 1. Shipping damage, either concealed or visible. Claims must be filed with the carrier.**
- 2. Damage caused by improper installation or improper electrical voltage.**
- 3. Any product which has been modified, unless authorized by ATM.**
- 4. Damage caused by corrosion, abrasion, immersion, or severe temperatures.**
- 5. Products which have been subject to abuse, misuse, abnormal usage, or accident.**

These warranties give you specific legal rights, and are subject to any applicable consumer protection legislation. You may also have additional rights which vary from state to state.

No other warranties, expressed, implied, or written, shall apply to this product. ATM will not be responsible for any consequential or incidental damages, loss of property, revenues, or profit, cost of removal, installation, or reinstallation, personal injury, or for any breach of warranty, regardless of how caused.

Active Thermal Management

Distributed in Canada by Artech Electronics Ltd.

1870 St. Regis Blvd., Dorval QC H9P 1H6

Toll Free. (800) 631-6448 • Montreal Line (514) 631-6448 • Fax (514) 421-9469

www.artech-electronics.com • info@artech-electronics.com